

iSolutionTM
by Acme

Your *integrated* Solution

www.prolight.co.uk

iColor 4
Professional Colour Mixer

iColor 4 DMX Upgrade chip

USER MANUAL

ORDER CODE: ISIC03C

OPERATION INSTRUC-

The iSolution iColor 4 DMX Upgrade chip modifies the DMX chart to control the 4 colours on the 4 DMX channels allowing 0-100% dimming.

For standard iColor 4 operation Dipswitch 10 must be set in the OFF position.
Please refer to the original manual for full product features.

Theatre Mode: set Dip switch 10 to the ON position. Dip switches 1-9 can then be used to set the DMX starting address. In this mode the unit uses 4 channels as follows: The units will not work Master/Slave in this mode.

DMX Mode 1	DMX Mode 2
Channel 01 = Colour	Channel 01 = Red
Channel 02 = Chase	Channel 02 = Green
Channel 03 = Speed	Channel 03 = Blue
Channel 04 = Dimmer	Channel 04 = Yellow