

LEDJ

Pixel Storm 12 **HEX Batten** User Manual



Order code: LEDJ294

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

- Before your initial start-up, please make sure that there is no damage caused during transportation.
- Should there be any damage, consult your dealer and do not use the equipment.
- To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.
- Please note that damages caused by user modifications to this equipment are not subject to warranty.



IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power cable come into contact with other cables. Handle the power cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the equipment and do not modify the unit.
- Do not connect this equipment to a dimmer pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available mains supply voltage is between 100~240V AC, 50/60Hz.
- Make sure that the power cable is never crimped or damaged. Check the equipment and the power cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately and have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not connect power or switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, stop use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Pro Light dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- This lighting fixture is for professional use only - it is not designed for or suitable for household use. The product must be installed by a qualified technician in accordance with local territory regulations. The safety of the installation is the responsibility of the installer. The fixture presents risks of severe injury or death due to fire hazards, electric shock and falls.
- Warning! Risk Group 2 LED product according to EN 62471. Keep a distance of at least 11feet (3.3m) to avoid direct eye and skin exposure. Do not operate the fixture if the external cover protective lens is damaged or missing. Avoid direct viewing of the UV light and refrain from using optical instruments or any device that may concentrate the light/radiation output. We advise users to take necessary precautions to minimise direct exposure to UV radiation and individuals suffering from a range of eye conditions, sunlight exposure disorders, or individuals using photosensitive medication, may receive discomfort if exposed to the ultraviolet (UV) light emitted from this fixture.
- WARRANTY: One year from date of purchase.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void. Incorrect operation may lead to danger e.g: short-circuit, burns and electric shocks etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and/or property.

Please note: These fixtures are intended for stage lighting and entertainment applications only, and are not intended for extended periods of use, including but not limited to house-light, industrial or architectural applications and should only be operated with short duty cycles.

Pixel Storm 12 HEX Batten



Featuring 12 x 12W RGBWAUV LEDs, the Pixel Storm 12 HEX provides an intense output for colour, white or blacklight applications. Individual pixel mapping of each LED, along with electronic dimming, strobe and colour change effects, gives users the ability to create stunning effects. Control is facilitated via a 4 button LED menu on the rear of the unit.


- 12 x 12W six-colour LEDs (RGBWAUV)
- Beam angle: 40°
- 3,381 Lux @ 2m (full on)
- Refresh rate: 3kHz
- Pixel mapping capabilities
- DMX channels: 3/4/6/8/11/72 or 77 selectable
- Static colour, colour mix, colour change, colour fade, sound active and master/slave modes plus built-in programs
- 0 - 100% dimming
- Variable strobe
- End brackets and central bracket allow for multiple rigging and floor standing applications
- Eyebrow supplied to reduce glare and hide the LEDs when uplighting
- 4 button menu with LCD display
- powerCON input/output
- 3-Pin XLR input/output
- 5-Pin XLR input/output
- Temperature controlled fan for whisper quiet operation



Specifications	Pixel Storm 12 HEX Batten
Power consumption	150W
Power supply	100~240V, 50/60Hz
Fuse	F3A 250V
Dimensions	155 x 1035 x 145mm
Weight	6.6kg
Order code	LEDJ294

40° - Lux					
FULL ON	13500	3381	1500	845	541
R	2780	694	308	174	111
G	4400	1100	489	275	176
B	976	244	108	61	39
W	4800	1199	533	300	192
A	2600	651	289	163	104
UV	N/A	N/A	N/A	N/A	N/A

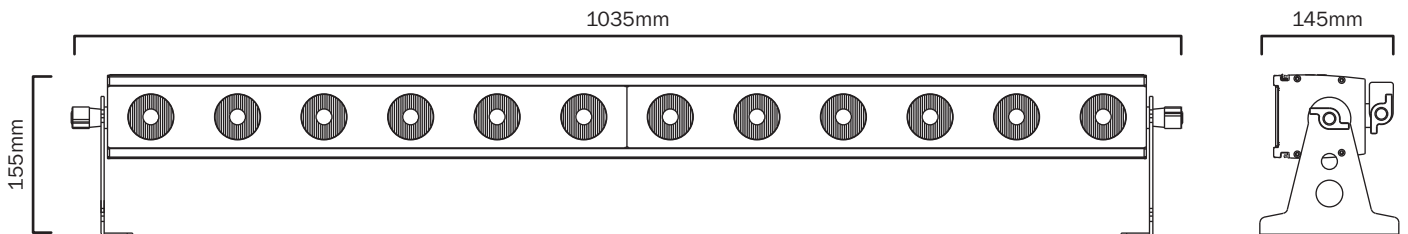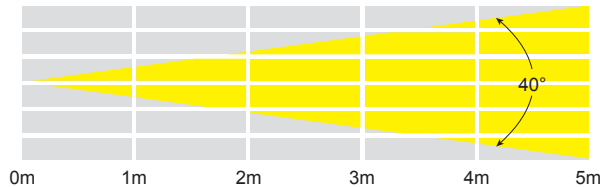

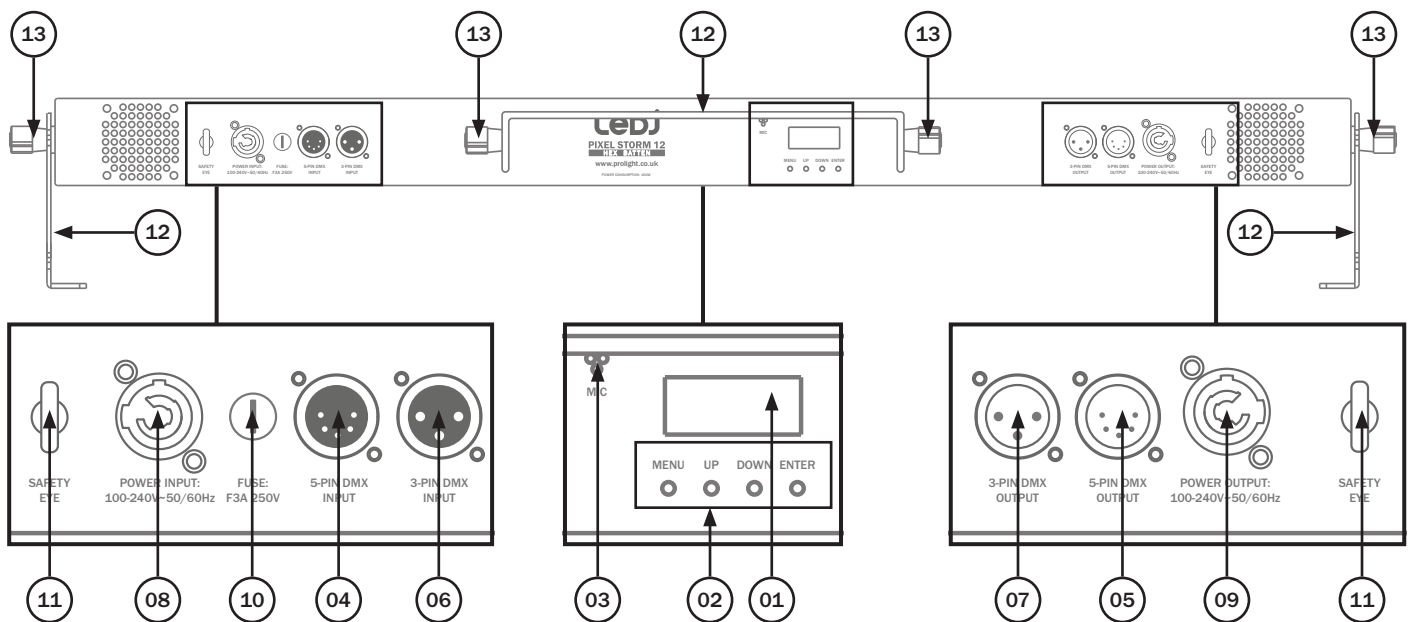

- 01 - LCD display
- 02 - Function buttons
- 03 - Microphone
- 04 - 5-Pin DMX input
- 05 - 5-Pin DMX output
- 06 - 3-Pin DMX input
- 07 - 3-Pin DMX output

- 08 - powerCON input
- 09 - powerCON output
- 10 - Fuse F3A 250V
- 11 - Safety eyes
- 12 - Hanging brackets
- 13 - Hanging bracket adjustable knobs


In the box: **1 x fixture,**
1 x eyebrow,
1 x power cable
& 1 x user manual

Eyebrow installation:


The fixture is supplied with an eyebrow for uplighting situations to reduce the glare and hide the LEDs. See below for installation instructions.



1) The eyebrow can be installed in the grooves on either side of the batten.

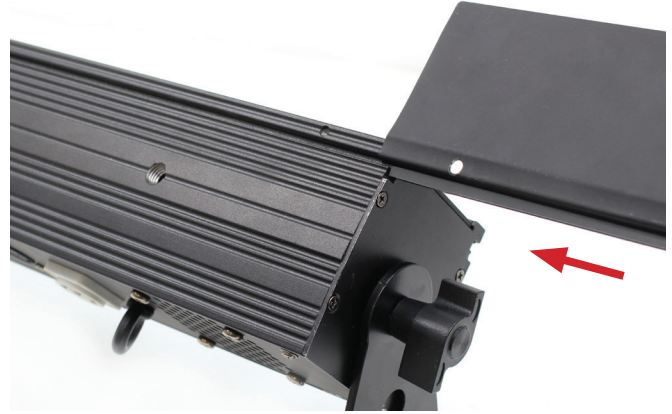

2) Insert one end of the eyebrow into the chosen groove.

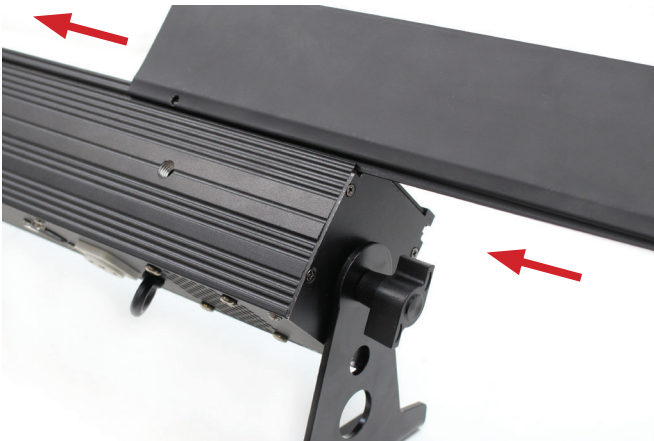

3) Carefully slide the eyebrow through the groove until the cutout holes for the thumbscrews line up with the threaded holes.



4) Once the holes are lined up insert the thumbscrew on either end of the batten and turn clockwise to tighten.

Control Panel Menu:

The LCD control panel situated on the rear of the fixture allows the user to access the menu system to adjust the fixtures settings. When the unit has been powered on it will show “**Update wait...**” followed by “**Pixel StormHex**”. The fixture will then return to its home screen. To access the main menu press the “**MENU**” button and use the “**UP**” and “**DOWN**” buttons until the menu required is highlighted.

Pressing the “**ENTER**” button on one of these options allows you to access the sub menu where you use the “**UP**” and “**DOWN**” buttons to select the option/value required.

Once the option/value has been selected press the “**ENTER**” button once more to confirm the setting.

To exit out of any menus, press and hold the “**MENU**” button.

Main Menu	Sub Menu	Options/Values (Default Settings in Bold)		Description
DMX Addr	Addr:	001 -512		DMX Address Setting
CH Mode		3CH (3 channel mode)		DMX Channel Setting
		4CH (4 channel mode)		
		5CH (5 channel mode)		
		6CH (6 channel mode)		
		8CH (8 channel mode)		
		11CH (11 channel mode)		
		72CH (72 channel mode)		
		77CH (77 channel mode)		
Master		On		Master Mode
		Off		
Slave		Slave 1		Slave Mode
		Slave 2		
ProgMode		Progm01-32	Sped=000-255	Built-in Programs
ColoMode		Red	000-255	Colour Mix Mode
		Green	000-255	
		Blue	000-255	
		White	000-255	
		Amber	000-255	
		UV	000-255	
ColMacro		Colour01-Colour64		Colour Macros
MastDim		000-255		Master Dimmer
Invert		Off		Direction Invert
		On		
Sound		On		Sound Mode (This takes priority over the program speed when on)
		Off		
Sense		001-100 (80)		Sound Sensitivity Setting
DMXFail		BlackOut		DMX Fail Setting
		Hold		
		Program		

Main Menu	Sub Menu	Options/Values (Default Settings in Bold)		Description
DimCurve		Linear		Dimming Curve Settings
		Square		
		InSquare		
		S-curve		
LCD		Off		LCD Backlight
		On		
Balance		Red	000-255	White Balance Setting
		Green	000-255	
		Blue	000-255	
		White	000-255	
		Amber	000-255	
		UV	000-255	
AutoTest		Testing		Auto Test
Temp		---		Fixture Temperature
Hours		----		Fixture Run Time
Factory		No		Factory Default Settings
		Yes		
Version		V-.-		Software Version

3 channel mode:

Channel	Value	Function
1	000-255	Red (0-100%)
2	000-255	Green (0-100%)
3	000-255	Blue (0-100%)

4 channel mode:

Channel	Value	Function
1	000-255	Red (0-100%)
2	000-255	Green (0-100%)
3	000-255	Blue (0-100%)
4	000-255	White (0-100%)

5 channel mode:

Channel	Value	Function
1	000-255	Red (0-100%)
2	000-255	Green (0-100%)
3	000-255	Blue (0-100%)
4	000-255	White (0-100%)
5	000-255	Amber (0-100%)

6 channel mode:

Channel	Value	Function
1	000-255	Red (0-100%)
2	000-255	Green (0-100%)
3	000-255	Blue (0-100%)
4	000-255	White (0-100%)
5	000-255	Amber (0-100%)
6	000-255	UV (0-100%)

8 channel mode:

Channel	Value	Function
1	000-255	Red (0-100%)
2	000-255	Green (0-100%)
3	000-255	Blue (0-100%)
4	000-255	White (0-100%)
5	000-255	Amber (0-100%)
6	000-255	UV (0-100%)
7	000-031	Blackout
	032-063	Open
	064-095	Strobe (slow-fast)
	096-127	Open
	128-159	Pulse strobe (slow-fast)
	160-191	Open
	192-223	Random strobe (slow-fast)
	224-255	Open
8	000-255	Master dimmer (0-100%)

11 channel mode:

Channel	Value	Function
1	000-255	Red (0-100%)
2	000-255	Green (0-100%)
3	000-255	Blue (0-100%)
4	000-255	White (0-100%)
5	000-255	Amber (0-100%)
6	000-255	UV (0-100%)
7	000	No function
	001-004	Colour Macro 1
	005-008	Colour Macro 2
	009-012	Colour Macro 3
	013-016	Colour Macro 4
	017-020	Colour Macro 5
	021-024	Colour Macro 6
	025-028	Colour Macro 7
	029-032	Colour Macro 8
	033-036	Colour Macro 9
	037-040	Colour Macro 10
	041-044	Colour Macro 11
	045-048	Colour Macro 12
	049-052	Colour Macro 13
	053-056	Colour Macro 14
	057-060	Colour Macro 15
	061-064	Colour Macro 16
	065-068	Colour Macro 17
	069-072	Colour Macro 18
	073-076	Colour Macro 19
	077-080	Colour Macro 20
	081-084	Colour Macro 21
	085-088	Colour Macro 22
	089-092	Colour Macro 23
	093-096	Colour Macro 24
	097-100	Colour Macro 25
	101-104	Colour Macro 26
	105-108	Colour Macro 27
	109-112	Colour Macro 28
	113-116	Colour Macro 29
	117-120	Colour Macro 30
	121-124	Colour Macro 31
	125-128	Colour Macro 32
129-132	Colour Macro 33	

Channel	Value	Function	
7 cont.	133-136	Colour Macro 34	
	137-140	Colour Macro 35	
	141-144	Colour Macro 36	
	145-148	Colour Macro 37	
	149-152	Colour Macro 38	
	153-156	Colour Macro 38	
	157-160	Colour Macro 40	
	161-164	Colour Macro 41	
	165-168	Colour Macro 42	
	169-172	Colour Macro 43	
	173-176	Colour Macro 44	
	177-180	Colour Macro 45	
	181-184	Colour Macro 46	
	185-188	Colour Macro 47	
	189-192	Colour Macro 48	
	193-196	Colour Macro 49	
	197-200	Colour Macro 50	
	201-204	Colour Macro 51	
	250-208	Colour Macro 52	
	209-212	Colour Macro 53	
	213-216	Colour Macro 54	
	217-220	Colour Macro 55	
	221-224	Colour Macro 56	
	225-228	Colour Macro 57	
	229-232	Colour Macro 58	
	233-236	Colour Macro 59	
	237-240	Colour Macro 60	
	241-244	Colour Macro 61	
	245-248	Colour Macro 62	
	249-252	Colour Macro 63	
	253-255	Colour Macro 64	
	8	000-031	Blackout
		032-063	Open
064-095		Strobe (slow-fast)	
096-127		Open	
128-159		Pulse strobe (slow-fast)	
160-191		Open	
192-223		Random strobe (slow-fast)	
224-255	Open		
9	000-255	Master dimmer (0-100%)	

11 channel mode (cont.):

Channel	Value	Function
10	000-007	No function
	008-014	Program 1
	015-021	Program 2
	022-028	Program 3
	029-035	Program 4
	036-042	Program 5
	043-049	Program 6
	050-056	Program 7
	057-063	Program 8
	064-070	Program 9
	071-077	Program 10
	078-084	Program 11
	085-091	Program 12
	092-098	Program 13
	099-105	Program 14
	106-112	Program 15
	113-119	Program 16
	120-126	Program 17

Channel	Value	Function
10 cont.	127-133	Program 18
	134-140	Program 19
	141-147	Program 20
	148-154	Program 21
	155-161	Program 22
	162-168	Program 23
	169-175	Program 24
	176-182	Program 25
	183-189	Program 26
	190-196	Program 27
	197-203	Program 28
	204-210	Program 29
	211-217	Program 30
	218-224	Program 31
	225-231	Program 32
232-255	Sound active	
11	000-255	Program speed (slow-fast)

72 channel mode:

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9
Red 1 (0-100%)	Green 1 (0-100%)	Blue 1 (0-100%)	White 1 (0-100%)	Amber 1 (0-100%)	UV 1 (0-100%)	Red 2 (0-100%)	Green 2 (0-100%)	Blue 2 (0-100%)
CH10	CH11	CH12	CH13	CH14	CH15	CH16	CH17	CH18
White 2 (0-100%)	Amber 2 (0-100%)	UV 2 (0-100%)	Red 3 (0-100%)	Green 3 (0-100%)	Blue 3 (0-100%)	White 3 (0-100%)	Amber 3 (0-100%)	UV 3 (0-100%)
CH19	CH20	CH21	CH22	CH23	CH24	CH25	CH26	CH27
Red 4 (0-100%)	Green 4 (0-100%)	Blue 4 (0-100%)	White 4 (0-100%)	Amber 4 (0-100%)	UV 4 (0-100%)	Red 5 (0-100%)	Green 5 (0-100%)	Blue 5 (0-100%)
CH28	CH29	CH30	CH31	CH32	CH33	CH34	CH35	CH36
White 5 (0-100%)	Amber 5 (0-100%)	UV 5 (0-100%)	Red 6 (0-100%)	Green 6 (0-100%)	Blue 6 (0-100%)	White 6 (0-100%)	Amber 6 (0-100%)	UV 6 (0-100%)
CH37	CH38	CH39	CH40	CH41	CH42	CH43	CH44	CH45
Red 7 (0-100%)	Green 7 (0-100%)	Blue 7 (0-100%)	White 7 (0-100%)	Amber 7 (0-100%)	UV 7 (0-100%)	Red 8 (0-100%)	Green 8 (0-100%)	Blue 8 (0-100%)
CH46	CH47	CH48	CH49	CH50	CH51	CH52	CH53	CH54
White 8 (0-100%)	Amber 8 (0-100%)	UV 8 (0-100%)	Red 9 (0-100%)	Green 9 (0-100%)	Blue 9 (0-100%)	White 9 (0-100%)	Amber 9 (0-100%)	UV 9 (0-100%)
CH55	CH56	CH57	CH58	CH59	CH60	CH61	CH62	CH63
Red 10 (0-100%)	Green 10 (0-100%)	Blue 10 (0-100%)	White 10 (0-100%)	Amber 10 (0-100%)	UV 10 (0-100%)	Red 11 (0-100%)	Green 11 (0-100%)	Blue 11 (0-100%)
CH64	CH65	CH66	CH67	CH68	CH69	CH70	CH71	CH72
White 11 (0-100%)	Amber 11 (0-100%)	UV 11 (0-100%)	Red 12 (0-100%)	Green 12 (0-100%)	Blue 12 (0-100%)	White 12 (0-100%)	Amber 12 (0-100%)	UV 12 (0-100%)

77 channel mode:

Channel	Value	Function
1	000-255	Red 1 (0-100%)
2	000-255	Green 1 (0-100%)
3	000-255	Blue 1 (0-100%)
4	000-255	White 1 (0-100%)
5	000-255	Amber 1 (0-100%)
6	000-255	UV 1 (0-100%)
7	000-255	Red 2 (0-100%)
8	000-255	Green 2 (0-100%)
9	000-255	Blue 2 (0-100%)
10	000-255	White 2 (0-100%)
11	000-255	Amber 2 (0-100%)
12	000-255	UV 2 (0-100%)
13	000-255	Red 3 (0-100%)
14	000-255	Green 3 (0-100%)
15	000-255	Blue 3 (0-100%)
16	000-255	White 3 (0-100%)
17	000-255	Amber 3 (0-100%)
18	000-255	UV 3 (0-100%)
19	000-255	Red 4 (0-100%)
20	000-255	Green 4 (0-100%)
21	000-255	Blue 4 (0-100%)
22	000-255	White 4 (0-100%)
23	000-255	Amber 4 (0-100%)
24	000-255	UV 4 (0-100%)
25	000-255	Red 5 (0-100%)
26	000-255	Green 5 (0-100%)
27	000-255	Blue 5 (0-100%)
28	000-255	White 5 (0-100%)
29	000-255	Amber 5 (0-100%)
30	000-255	UV 5 (0-100%)
31	000-255	Red 6 (0-100%)
32	000-255	Green 6 (0-100%)
33	000-255	Blue 6 (0-100%)
34	000-255	White 6 (0-100%)
35	000-255	Amber 6 (0-100%)
36	000-255	UV 6 (0-100%)
37	000-255	Red 7 (0-100%)
38	000-255	Green 7 (0-100%)
39	000-255	Blue 7 (0-100%)
40	000-255	White 7 (0-100%)

Channel	Value	Function
41	000-255	Amber 7 (0-100%)
42	000-255	UV 7 (0-100%)
43	000-255	Red 8 (0-100%)
44	000-255	Green 8 (0-100%)
45	000-255	Blue 8 (0-100%)
46	000-255	White 8 (0-100%)
47	000-255	Amber 8 (0-100%)
48	000-255	UV 8 (0-100%)
49	000-255	Red 9 (0-100%)
50	000-255	Green 9 (0-100%)
51	000-255	Blue 9 (0-100%)
52	000-255	White 9 (0-100%)
53	000-255	Amber 9 (0-100%)
54	000-255	UV 9 (0-100%)
55	000-255	Red 10 (0-100%)
56	000-255	Green 10 (0-100%)
57	000-255	Blue 10 (0-100%)
58	000-255	White 10 (0-100%)
59	000-255	Amber 10 (0-100%)
60	000-255	UV 10 (0-100%)
61	000-255	Red 11 (0-100%)
62	000-255	Green 11 (0-100%)
63	000-255	Blue 11 (0-100%)
64	000-255	White 11 (0-100%)
65	000-255	Amber 11 (0-100%)
66	000-255	UV 11 (0-100%)
67	000-255	Red 12 (0-100%)
68	000-255	Green 12 (0-100%)
69	000-255	Blue 12 (0-100%)
70	000-255	White 12 (0-100%)
71	000-255	Amber 12 (0-100%)
72	000-255	UV 12 (0-100%)
73	000	No function
	001-004	Colour Macro 1
	005-008	Colour Macro 2
	009-012	Colour Macro 3
	013-016	Colour Macro 4
	017-020	Colour Macro 5
	021-024	Colour Macro 6
025-028	Colour Macro 7	

77 channel mode (cont.):

Channel	Value	Function
73 cont.	029-032	Colour Macro 8
	033-036	Colour Macro 9
	037-040	Colour Macro 10
	041-044	Colour Macro 11
	045-048	Colour Macro 12
	049-052	Colour Macro 13
	053-056	Colour Macro 14
	057-060	Colour Macro 15
	237-240	Colour Macro 60
	241-244	Colour Macro 61
	245-248	Colour Macro 62
	249-252	Colour Macro 63
	253-255	Colour Macro 64
	061-064	Colour Macro 16
	065-068	Colour Macro 17
	069-072	Colour Macro 18
	073-076	Colour Macro 19
	077-080	Colour Macro 20
	081-084	Colour Macro 21
	085-088	Colour Macro 22
	089-092	Colour Macro 23
	093-096	Colour Macro 24
	097-100	Colour Macro 25
	101-104	Colour Macro 26
	129-132	Colour Macro 33
	133-136	Colour Macro 34
	137-140	Colour Macro 35
	141-144	Colour Macro 36
	145-148	Colour Macro 37
	149-152	Colour Macro 38
	153-156	Colour Macro 38
	157-160	Colour Macro 40
	161-164	Colour Macro 41
	165-168	Colour Macro 42
169-172	Colour Macro 43	
173-176	Colour Macro 44	
177-180	Colour Macro 45	
181-184	Colour Macro 46	

Channel	Value	Function
73 cont.	185-188	Colour Macro 47
	189-192	Colour Macro 48
	193-196	Colour Macro 49
	197-200	Colour Macro 50
	201-204	Colour Macro 51
	250-208	Colour Macro 52
	209-212	Colour Macro 53
	213-216	Colour Macro 54
	217-220	Colour Macro 55
	221-224	Colour Macro 56
	225-228	Colour Macro 57
	229-232	Colour Macro 58
	233-236	Colour Macro 59
	237-240	Colour Macro 60
	241-244	Colour Macro 61
	245-248	Colour Macro 62
249-252	Colour Macro 63	
253-255	Colour Macro 64	
74	000-031	Blackout
	032-063	Open
	064-095	Strobe (slow-fast)
	096-127	Open
	128-159	Pulse strobe (slow-fast)
	160-191	Open
	192-223	Random strobe (slow-fast)
224-255	Open	
75	000-255	Master dimmer (0-100%)
76	000-007	No function
	008-014	Program 1
	015-021	Program 2
	022-028	Program 3
	029-035	Program 4
	036-042	Program 5
	043-049	Program 6
	050-056	Program 7
	057-063	Program 8
	064-070	Program 9
071-077	Program 10	

77 channel mode (cont.):

Channel	Value	Function
76 cont.	078-084	Program 11
	085-091	Program 12
	092-098	Program 13
	099-105	Program 14
	106-112	Program 15
	113-119	Program 16
	120-126	Program 17
	127-133	Program 18
	134-140	Program 19
	141-147	Program 20
	148-154	Program 21
	155-161	Program 22
	162-168	Program 23
	169-175	Program 24
	176-182	Program 25
	183-189	Program 26
	190-196	Program 27
	197-203	Program 28
	204-210	Program 29
	211-217	Program 30
218-224	Program 31	
225-231	Program 32	
	232-255	Sound active
77	000-255	Program speed (slow-fast)

Setting the DMX address:

The DMX mode enables the use of a universal DMX controller. Each fixture requires a “start address” from 1- 511. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 7 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100,101,102,103,104,105 and 106. Choose a start address so that the channels used do not overlap. E.g. the next unit in the chain starts at 107.

DMX 512:

DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

DMX linking:

DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

DATA cable (DMX cable) requirements (for DMX operation):

This fixture can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit and your DMX controller require a standard 3-pin XLR connector for data input/output, see image below.



Further DMX cables can be purchased from all good sound and lighting suppliers or Pro Light Concepts dealers.

Please quote:

CABL10 – 2m



CABL11 – 5m

CABL12 – 10m

Note: DMX cable must be daisy chained and cannot be split.

Notice:

Be sure to follow the diagrams below when making your own cables. Do not connect the cables shield conductor to the ground lug or allow the shield conductor to come in contact with the XLRs outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

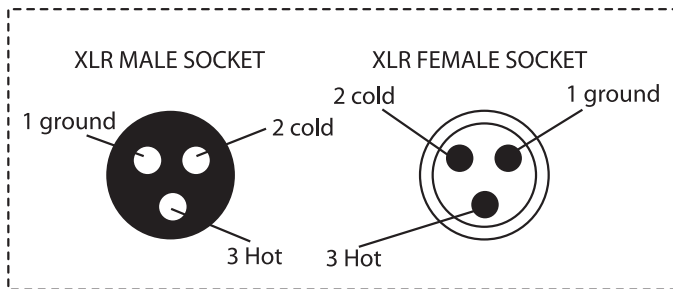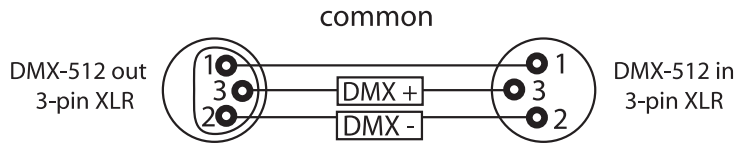

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Negative
Pin 3 = Positive

Special note:

Line termination:

When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.


Using a cable terminator will decrease the possibilities of erratic behaviour.

(3-pin - Order ref: CABL90, 5-pin - Order ref: CABL89)

Termination reduces signal transmission problems and interference. It is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.

5-pin XLR DMX connectors:

Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The diagram below details the correct cable conversion.

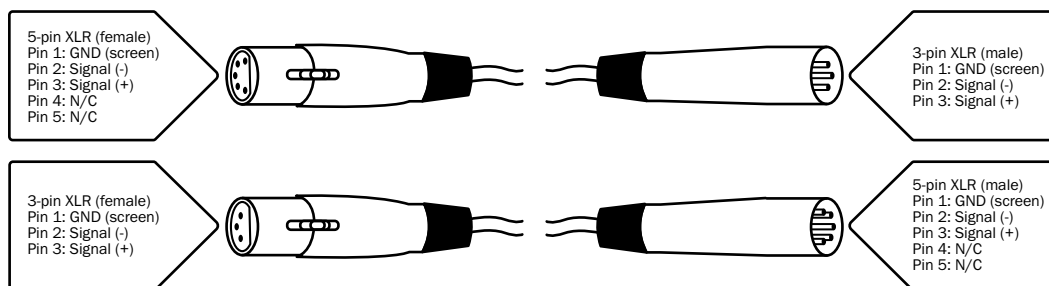



***Correct Disposal of this Product
(Waste Electrical & Electronic Equipment)***

(Applicable in the European Union and other European countries
with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



LEDj