
## <u>@lumen8</u>

## Plasma IK RGB

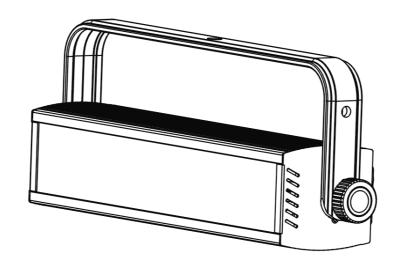

ELUM053A

**User Manual** 

Please read the user manual before use

### **Table of Contents**

1,	Safety Information	. 2
2,	Rear Panel	. 4
3,	Preparation for Use	4
4,	Main Functions	. 5
5,	Remote Control	9
6,	Technical Specification	13

#### 1. Safety Information

## Warning: This product is for professional use only! It is not for household use.

The Plasma 1K RGB presents risks of lethal or severe injury due to fire and heat, electric shock, ultraviolet radiation, and falls. Flashing light is also known to trigger epileptic seizures in persons who are photosensitive. Read this manual before powering or installing the fixture, follow the safety precautions listed below and observe all warnings in this manual and printed on the fixture.

Noted: high voltage in the LED board!

High power strobes, so please avoid extended periods of continuous flashing

#### To guard against electric shock

- Do not remove the rear cover: there are no user-serviceable parts inside.
- Always ground (earth) the fixture.
- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault protection.
- Do not expose the fixture to rain or moisture.

#### To guard against UV radiation, burns, and fire

- Never operate the fixture with the front glass open, missing or damaged.
- Do not stare directly into the light. Never look at an exposed LED while it is lit.
- Never attempt to bypass the fuse. Always replace defective fuses with ones of the specified type and rating.
- Verify that the power feed cable is rated for the current draw of all connected fixtures.
- Keep all combustible materials (for example fabric, wood, paper) at least 0.5 meters away from the fixture.
- Keep flammable materials well away from the fixture.
- Minimum distance to illuminated surface is 10 meters.
- Provide a minimum clearance of 30cm around fixture air vents.
- Never place filters or other materials over the front glass cover.
- The exterior of the fixture can reach high temperatures. Allow the fixture to cool for

at least 15 minutes before handling.

- Do not modify the fixture or install anything other than genuine parts.
- Do not operate if the ambient air temperature (Ta) exceeds 40° C (104° F).

#### To guard against falls

- When suspending the fixture above ground level, verify that the structure can hold at least 10 times the weight of all installed fixtures.
- Verify that all external covers and rigging hardware are securely fastened and use an approved means of secondary attachment such as a safety cable.
- Block access below the work area whenever installing or removing the fixture.


#### To guard against epileptic seizure

- Do not operate the fixture near stairways.
- Provide advance notice that strobe lighting is in use.

For AC 220-240V power supply, the maximum fixtures that can be connected on one power cable is 6(including the first fixture);

For AC 100~120V power supply, the maximum fixtures that can be connected on one power cable is 3 (including the first fixture).

#### 2. Rear Panel

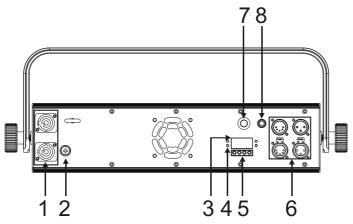

#### 1, Mains input/output:

PowerCon connection from main power supply, and connection for main power supply to the next unit.

2, Circuit Breaker: T6.3A

3, LED display

#### 4, LED indicator:

Signal	Flash	Signal input present
Master	On	Master
Slave	On	Slave
Sound	Flash	Sound activation

#### 5, Menu /UP/DOWN/ Enter button

6, DMX input/output

**7, Microphone:** Receive music signal for sound active mode

**8, CA-8 Connector:** Connect with easy controller CA-8

#### 3. Preparation for Use


#### **INSTALLATION**

The Plasma 1K RGB may be installed in any orientation. The mounting bracket provides one 12 mm holes for direct fastening or attachment of rigging clamps.

#### 4. Main Function

Press MENU button to enter the function, then use the UP/DOWN or MENU buttons to select the function you want. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

The main menu as follows:

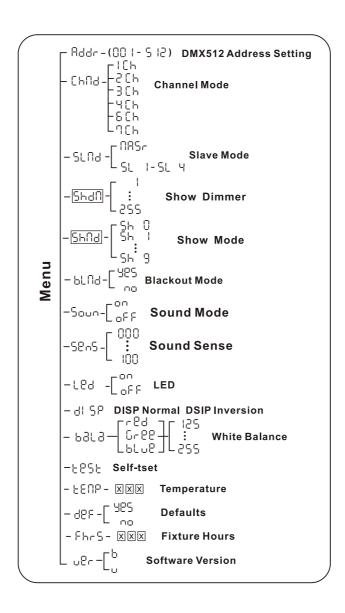




Select ADDR option and the display will blink, press the ENTER button to

confirm your selection. You can check the current DMX address on the display. The DMX address can be changed by pressing the UP/DOWN buttons and then press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

## 

Select the CHND option and press the ENTER button to confirm your selection. Change the channel mode from (1/2/3/4/) channels by pressing the UP/DOWN buttons. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

# Select the Stade option and press the ENTER button to confirm your selection. Select the Master) (Master) (Stade) (Note: Each 4 units perform as one show group, slave will perform as master if select to by pressing the UP/DOWN buttons. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

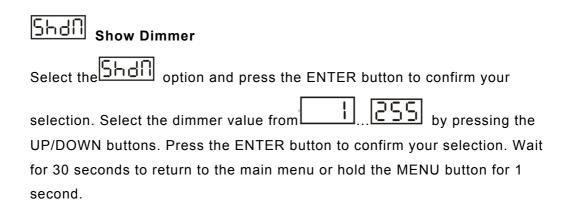

### Show Mode

Select the Shood option and press the ENTER button to confirm your selection. Select the show from Shood by pressing the UP/DOWN buttons. The shows are valid when the units are set to master or under master/slave mode. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

## Select the option and press the ENTER button to confirm your selection. Select (when no DMX signal is present the fixture will be in blackout) or (when no DMX signal is present the fixture will run in show mode). Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

## Select the option and press the ENTER button to confirm your selection. Select the pressing the UP/DOWN buttons. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second. Sound mode will only be available once the fixture is set as a master unit.

## Sound sense

Select the Sensitivity from 000-100 by pressing the UP/DOWN button. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.



Select the LED option and press the ENTER button to confirm your selection. You can view the current ON/OFF status of the LED display now. You can change its status by pressing the UP/DOWN buttons and then press the ENTER button to confirm your selection. If you choose OFF, the LED display will blackout after I minute. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

#### LED display direction setting

Select the DISP option and press the ENTER button to confirm your selection. Select the DISP / DSIP by pressing the UP/DOWN button. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.



Select the BALA option and press the ENTER button to confirm your selection. Select the RED, GREEN, BLUE by pressing the UP/DOWN buttons. Press the ENTER button to confirm your selection then adjust the balance address by using the UP/DOWN buttons. Press the ENTER button to confirm. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.



Select the TEST option and press the ENTER button to confirm your selection. The flash indicator will light up and the unit will run an automatic test. Once the self-test has finished it will return to the test menu. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.



Select the TEMP option and press the ENTER buttons, the display will show the temperature of unit. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.



Select the DEF option and press the ENTER buttons. Select the defaults or not by pressing the UP/DOWN button. Press the ENTER button to confirm your selection. Wait for 30 seconds to return to the main

## Fhr 5 Fixture Hours

Select the FHRS and press the ENTER button to confirm. The display will now show the number of working hours of the unit. To go back to the previous functions without any changes press the MENU button.

## Check the version number

menu or hold the MENU button for 1 second.

Select the UER and press the ENTER button to confirm. You can now view the current version number e.g. (b 10/v 10) and check it by using the UP/DOWN buttons. Wait for 30 seconds to return to the main menu or hold the MENU button for 1 second.

#### 5. Remote Control

#### 1 Channel Mode

Channel	Value	Function
	0-5	Blackout
1	6-250	Flash rate, slow to fast
	251-255	Continuous "Blinder" effect

#### 2 Channel Mode

Channel	Value	Function
1	0-5	Blackout

	6-255	Flash rate, slow to fast
2	0-5	Blackout
Flash intensity	6-255	Minimum to maximum

#### 3 Channel Mode

	Channel	Value	Function
1	Flash intensity	0-5	Blackout
		6-255	Minimum to maximum
2	Flash duration	0-255	0-650 ms@50 Hz AC, or 0-530 ms@60 Hz AC
3	Flash rate	0-5	No flash (single flash with ch. 1)
		6-255	0.5-25 Hz@50 Hz AC, or 0.6-30 Hz @60 Hz AC

#### 4 Channel Mode

Channel	Value	Function
1 Flash intensity	0-5	Blackout
	6-255	Minimum to maximum
2 Flash duration	0-255	0-650 ms@50 Hz AC, or 0-530 ms@60 Hz AC
3 Flash rate	0-5	No flash (single flash with ch. 1)
	6-255	0.5-25 Hz@50 Hz AC, or 0.6-30 Hz @60 Hz AC
4	0-5	No effect
Special effects	6-50	Ramp up

51-100	Ramp down
101-150	Ramp up-down
151-200	Lightning
201-255	Random

#### **6 Channel Mode**

Channel	Value	Function
1 (R)Flash intensity	0-5	Blackout
1 (N) hash intensity	6-255	Minimum to maximum
2 (G)Flash intensity	0-5	Blackout
	6-255	Minimum to maximum
3 (B)Flash intensity	0-5	Blackout
	6-255	Minimum to maximum
4	0-5	Blackout
(RGB)Flash intensity	6-255	Minimum to maximum
5 Flash duration	0-255	0-650 ms@50 Hz AC, or 0-530 ms@60 Hz AC
6 Flash rate	0-5	No flash (single flash with ch. 1)
	6-255	0.5-25 Hz@50 Hz AC, or 0.6-30 Hz @60 Hz AC

#### 7 Channel Mode

Channel	Value	Function

1 (R)Flash intensity	0-5	Blackout
	6-255	Minimum to maximum
2 (G)Flash intensity	0-5	Blackout
	6-255	Minimum to maximum
3 (B)Flash intensity	0-5	Blackout
	6-255	Minimum to maximum
4	0-5	Blackout
(RGB)Flash intensity	6-255	Minimum to maximum
5 Flash duration	0-255	0-650 ms@50 Hz AC, or 0-530 ms@60 Hz AC
6 Flash rate	0-5	No flash (single flash with ch. 1)
	6-255	0.5-25 Hz@50 Hz AC, or 0.6-30 Hz @60 Hz AC
	0-5	No effect
	6-50	Ramp up
7	51-100	Ramp down
Special effects	101-150	Ramp up-down
	151-200	Lightning
	201-255	Random

#### **DMX CONTROL SUMMARY**

#### **Built-in effects**

Six programmed effects are available on channel 4 in the 4-channel DMX mode,

and channel 7 in the 7-channel DMX mode, The effects may be altered using the intensity, duration, and rate controls.

- Ramp up: Light gradually increases in intensity, and then blacks out.
- Ramp down: Light flashes to full intensity, and then gradually fades.
- Ramp up-down: Light gradually increases and decreases.
- Lightning: The flashes simulate lightning. Duration is not adjustable.
- Random flash: Light flashes randomly with variable rate and intensity. Multiple units flash independently of each other.

#### Single Flash

To trigger single flashes, start with the intensity and flash rate at 0 and then set the intensity on channel 1. When the value of channel 1 is changed, the light will flash once with the programmed intensity, duration, and effect.

#### 6. Technical Specifications

AC power	100 - 240 V , 50/60 Hz
Total Power consumption	
AC mains power cable	$\ldots \ldots 2 \ m^2$
LED	
Dimension	479×107.5×174mm
Weight	
Ambient air temperature	
Short-circuit protection	

#### **Safety Installation Distance**

Minimum distance to combustible materials	0.5 m
Minimum distance to illuminated surfaces	10m

